



DISHWASHER TABLETS
**POWER
ALL IN ONE**

FOR EVERYDAY CLEAN & SHINE



Finish Power the All in One Solution for your dishes. Our Powerball supercharges the tablet for everyday clean and shine 1st time, every time



Save water No pre-rinse	Clean dish	Shiny glass	Eco cycle
1st time tough stain removal	Glass protect	Protects silverware	Protects dish decor

	✓	✓	✓	✓	✓	✓	✓
	✓	✓	✓	✓	✓	✓	✓
	✓	✓	✓	✓	✓	✓	✓

DESIGNED FOR

All Dishwashers
Perfect for Office Kitchenettes



INGREDIENTS

5-15% Oxygen-based Bleaching Agents, Phosphonates, <5% Polycarboxylates, Non-ionic Surfactants, Enzymes (Subtilisin, Amylase), Perfumes

DOSAGE | 1 tab per wash

INFORMATION

Tab Count	Regular SKU Code	Lemon SKU Code
30	3184335	•
46	3184388	3204694
60	3079356	3204680
63	•	3204692
75	3184393	3205223
80	3040878	3204762
81	3205212	3205211
84	3205602	3205210
90	3184253	3184252
110	3205209	•

COMPLETE YOUR DISHWASHING EXPERIENCE

- RINSE AID**
For drying & spot prevention.
- DEEP CLEANER**
Hygienically cleans grease & limescale.
- SALT**
Protection from limescale residue.
- CARE TABS**
Degreasing & cleaning boost.
- PROTECTOR**
Protection from glass corrosion.

Causes serious eye irritation. Keep out of reach of children. IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. If eye irritation persists: get medical attention. If medical advice is needed, have product container or label at hand. Do not ingest. If product is ingested then seek medical advice.